



UK Forks

0800 123 101

hire@ukforks.com ukforks.com




Want to increase uptime? Subscribe and save with our Grease Cartridge subscription

For as little as **£5 a week*** we'll deliver grease to your site every month to make sure your operators have the lubrication needed to keep your machines in tip top condition. **To subscribe please get in touch today.**

Benefits

- >> Enhanced safety.** Regular greasing reduces the risk of equipment malfunctions.
- >> Reduced downtime.** Regular greasing helps prevent unexpected maintenance issues, maximising the operational utility of your machine.
- >> Reduced costs.** Regular greasing reduces costly repairs, reduces fuel consumption through efficient operation and reduces downtime ensuring consistent productivity.

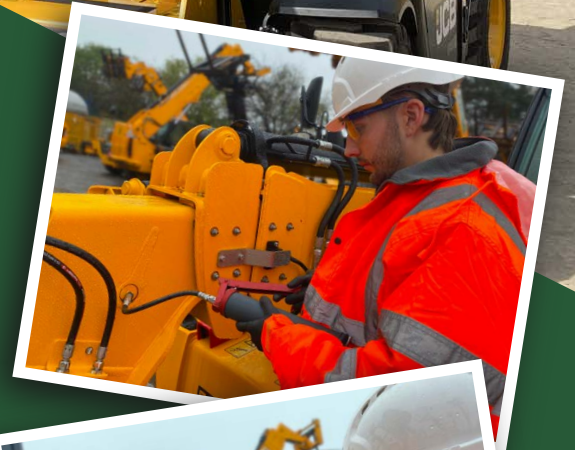

* Billed minimum 4-weekly. **Grease also available in packs of 12 cartridges.

JCB Telehandler

Weekly Greasing Guide


Your Telehandler will need greasing every week. This timescale is set by the manufacturer. Further routine maintenance procedures can be found in the Operator's Manual provided with the Telehandler (pages 206 to 232).

Failure to carry out routine greasing will result in premature component failure which will present health and safety risks and the possibility of unplanned and costly downtime. The pins, bushes and bearings are all load-bearing, moving parts and need regular greasing to prevent failure.

Before Greasing

Never enter the space under the Telehandler boom without the safety prop being in place (pic. 1). Location of the boom prop is on the front of the Telehandler (pic. 2). The grease gun supplied with the Telehandler is in the tool box located under the front windscreen (pic. 3). The latch for the tool box is located next to the handbrake lever (pic. 4).


Pic. 1

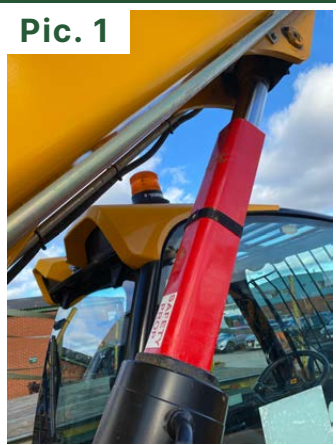

Pic. 2



Pic. 3

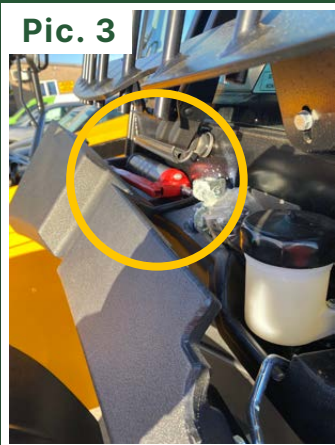

Pic. 4



Greasing Zones

The grease points (located in the operators handbook in your machine) have all been allocated zones. Carrying out one zone a day will break up the process and ensure all grease points are lubricated on a regular basis.

Zone A: Carriage

No. of grease points: 3

Total time to grease: 5 mins

Zone B: Front axle and stabilisers

No. of grease points: 8

Total time to grease: 10 mins

Zone C: Rear axle, displacement ram and boom lift ram

No. of grease points: 7

Total time to grease: 10 mins

